

Post Indicator Conversion Instructions

A20801 to an A20806

You can convert an A20801 that is installed into an A20806 IF the cotter pin connecting the stem coupling to the valve op nut was not installed. To determine if the A20801 stem was pinned to the valve op nut reference Mueller Catalog Section E-1-7 and follow these instructions:

1. Dig down around the A20801 Post Indicator until the bottom of the Upper Barrel (P324) can be seen.
2. Loosen the (2) Hex Head Screws (P122) so that the Upper Barrel is free.
3. Separate the Upper Barrel from the Lower Barrel (P123) and set aside.
4. Once the Upper Barrel is removed, lift up on the Adjustable Stem (P126). If the stem can be removed it is not connected to the Valve Op Nut. Remove stem and set aside.

If the steps 1-4 are successful, follow these steps to replace Post Indicator:

1. Determine the correct A20806 "Order Length". Consult Mueller Catalog Section E-1-2 for assistance.
2. Remove the Lower Barrel (P323) and set aside from the New A20806 Post Indicator.
3. Remove the telescoping Lower Stem (P326) from the New A20806 Post Indicator.
4. Lower the new A20806 Lower Stem into the existing A20801 Lower Barrel (P123).
5. Align the Lower Stem Coupling and seat on the Valve Op Nut.
6. Place the A20806 Upper Barrel Assembly on the existing A20801 Lower Barrel.
7. Tighten the (2) Hex Head Screws (P322).

Adjust the targets (if necessary). Follow instruction in A20806 Operation Manual.