



Reliable Connections™

**Valve
Gaskets**

Installation Instructions

Joint gaskets furnished with this valve (or hydrant) **MUST** be used. Do not substitute.

Inspect gasket, joint socket and groove, and pipe spigot for cleanliness. Remove any foreign matter or excessive coating.

Insert gasket in socket groove, bulb end first. Be sure heel of gasket is uniformly seated.

Lubricate exposed gasket face and also pipe spigot with special lubricant furnished with pipe.

If, at this point either of the lubricated surfaces gets dirty, thoroughly re-clean.

Assemble pipe in joint as recommended by pipe manufacturer. Keep pipe and valve or hydrant joint in approximate straight alignment during assembly.

In sub-freezing weather gaskets must be kept at 40°F or higher prior to installation.

Phone: (800) 423-1323

By deviating from the above listed instructions, you will void any product warranty and release Mueller Co. and its affiliated entities from any and all liability associated with the installation or use of this product. For details on the product's warranty, terms, and conditions, please visit www.muellercompany.com.

© 2016 Mueller Co., LLC. All rights reserved.

Form 9442 02/16