



Reliable Connections™

Service Saddles

Installation Instructions: H-13000 Series

A small gap will remain between the ends of the upper and lower straps when the saddle is properly installed and tightened. The gap must be approximately equal on both sides. Ensure that the proper tightening torque (see chart) is applied to the bolts to obtain proper gasket loading and sealing without causing undue stress on the straps. **DO NOT OVERTORQUE THE BOLTS.**

Size Saddle	10" - 12"
Torque ft-lbs	25 - 35

Phone: (800) 423-1323

By deviating from the above listed instructions, you will void any product warranty and release Mueller Co. and its affiliated entities from any and all liability associated with the installation or use of this product. For details on the product's warranty, terms, and conditions, please visit www.muellercompany.com.

© 2016 Mueller Co., LLC. All rights reserved.

Form 11922 03/16